

PLATE CLAMP WARNINGS

WARNINGS

1. **DO** consult Operator's manual when in doubt. Factory representatives are available upon request at no charge to train and assist in establishing the proper use.
2. **DO** lock clamp closed before lifting load. **NEVER** lift with Lock in open or "Lock Open" position.
3. **DO** use safety hooks. **NEVER** use a hook that may release clamp.
4. **DO** use an adequate number of clamps to balance load. **NEVER** lift loads that are not balanced.
5. **DO** use clamps within their rated capacity. **NEVER** overload clamp.
6. **DO** inspect clamp before each lift, follow inspection and maintenance instructions and use RENFROE replacement parts to assure proper operation of the clamp.
7. **DON'T** side load. **NEVER** lift from side with vertical clamp.
8. **DON'T** lift over workmen. **NEVER** lift over Safety Areas or personnel.
9. **DON'T** misuse. **NEVER** lift plate from bottom of plate stack.
10. **DON'T** rush. **NEVER** lift more than one plate at a time with a vertical clamp.
11. **DON'T** improvise. Always use correct clamp for job. **NEVER** lift horizontally with a vertical clamp.
12. **DON'T** use clamp that has been overloaded.
13. **DON'T** alter clamp. **NEVER** grind, weld or modify the clamp in any manner.

